



5601

5601 : PUSH PULL SWITCHES
3 Position off/on/on, 2 circuit
12V, Chrome plated ABS knob.



5603

5603 : 2 POSITION OFF/ON 12V
Chrome plated ABS knob.



5605

5605 : PUSH BUTTON HORN
SWITCH, OFF/ON 12V
Chrome plated brass button.

5606 : SAME AS ABOVE
WITH COVER.



10208

10208 : HORN SWITCH WITH COVER
12V, Base dia. 22mm, base length : 23mm.



10209

10209 : HORN SWITCH
12V, Base dia. 22mm, base length : 23mm.

ROCKER SWITCHES



5612

5612 : ROCKER SWITCH
Illuminated red, 2 Position,
3 pin 12V 15A.



5613

5613 : ROCKER SWITCH
Illuminated amber & red,
3 position, 6 pin 12V 15A.



5614

5614 : ROCKER SWITCH
Non-illuminated, 3 position,
6 pin 12V 15A.

TOGGLE SWITCHES



5620

5620 : ILLUMINATED RED TOGGLE LIGHTS
when switch is turned on.
2 Position 6 pin 12V 15A.



5621

5621 : 3 POSITION, 6 PIN 12V 15A.